

VIGIER GV W90 VGV-CW90 WIRING DIAGRAM

Switch positions :

1. Neck
2. Both pickups in series
3. Both pickups in parallel
4. Both pickups in series, out of phase
5. Bridge

